




MODEL 50VA
Firmware v 1.50

Playback Technologies, Inc.
135 North Victory Boulevard
Burbank, California
(818) 556-5030
Fax (818) 556-5034

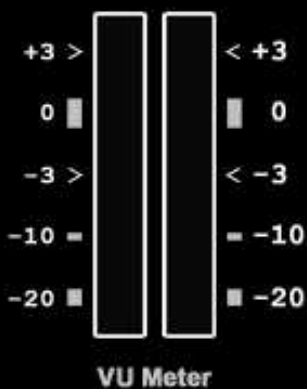

Basic Play Functions

Press & hold keys in specified sequence to execute command

Play	Plays at current speed
<	Pauses deck, then frame steps back
>	Pauses deck, then frame steps forward
<<	Locates to the beginning of previous clip
>>	Locates to the first frame of next clip
Option + Play	Loop playback between Cue1 & Cue2
Pause + Option + Play	Loop current clip (auto loads Cue1 & Cue2)
Play + >	Scan forward at 2x
Play + >>	Scan forward at 4x
Play + <	Scan reverse at 2x
Play + <<	Scan reverse at 4x

Advanced Play Functions

Option + Cue 1-4	Save current frame to Cue 1-4
Cue 1-4	Locate to clip or frame stored in Cue 1-4
Option + >	Forward one second
Option + <	Back one second
Option + <<	Locates to the first frame of video on the deck
Option + >>	Locates to the last frame of video on the deck
Pause + <<	Decrease next playback speed
Pause + >>	Increase next playback speed
Option + Jog/shuttle	Enters clip search
Jog/shuttle	Exits clip search; toggles between jog/shuttle
Option + Pause	Name/Rename clip

Record Functions

Rec	Goes to passthrough (E-E)
Rec (2nd keypress)	Begins recording
Cue 1-4	Save current frame to Cue1-4
Option + Rec + <<	Change compression ratio
Option + Rec + >>	Change active video input

Deck Utility

Option + Rec + Play	Toggles genlock on/off (Do not leave on without external reference connected)
Option + Rec + <	Decrease time-lapse frame rate
Option + Rec + >	Increase time-lapse frame rate Default setting: TL;1F (30.00fps)

Disk Utility

Pause + <+>	Delete current clip
Option + <+>	Asks to format disk